



## Louvered Screen Plan

www.flexfence.com

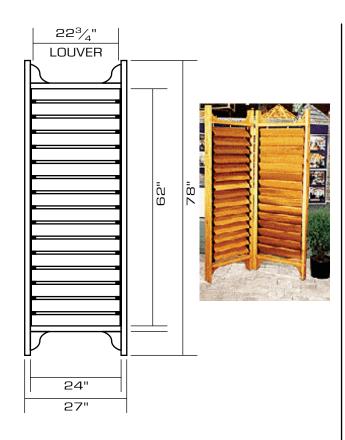

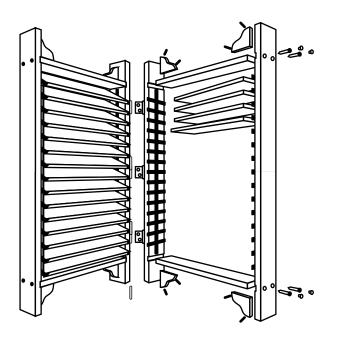

## MATERIAL LISTING

- 3/kits FLEX•fence
  (each panel requires 1 1/3 kits)
- 2. 4/pcs.- 2'x4'x10' pine (cedar could be used for exterior use)
- 3. 30/pcs. 1"x6"x 24" (MDF board can be used inside)
- 4. 8/pcs. 5" wood ornamental brackets
- 5. 3/pcs. hinges (your choice e. g. brass)
- 6. 16/pcs. #8-2" wood screws
- 7. 1" finishing nails
- 8. 16/pcs. wood plugs (optional)
- 9. Carpenter's glue

## TOOLS REQUIRED

- 1. Pencil
- 2. Measuring Tape
- 3. #1 Robertson Screw Driver-Green Handle or (Philips Screw Driver)
- 4. #2 Robertson Screw Drive-Red Handle (Philips -Screw Driver)
- 5. Hand Saw
- 6. Hammer
- 7. Chissel
- 8. Combination Square
- 9. Protective Eyewear
- 10. Level

## OPTIONAL TOOLS

- \* Drill with appropriate bits & counter sink bit
- \* Router with decorative bits
- \* Power saws Mitre & Skill